

# SOVOL SV01 Vase Mode

## Ultimaker CURA / Creality Slicer

Эти опции должны быть обязательно включены:

- Surface mode: both / normal / surface
- Spiralize outer countour
- Smooth spiralized countour
- minimum layer time: 8s
- minimum speed: 0

From:

<https://micronode.ru/> - **micronode.ru**

Permanent link:

[https://micronode.ru/wiki/3d\\_print/printer/sv01-vase](https://micronode.ru/wiki/3d_print/printer/sv01-vase)

Last update: **2023/01/11 06:10**

